


GOODY

Designed By Tony Slater
March 1997

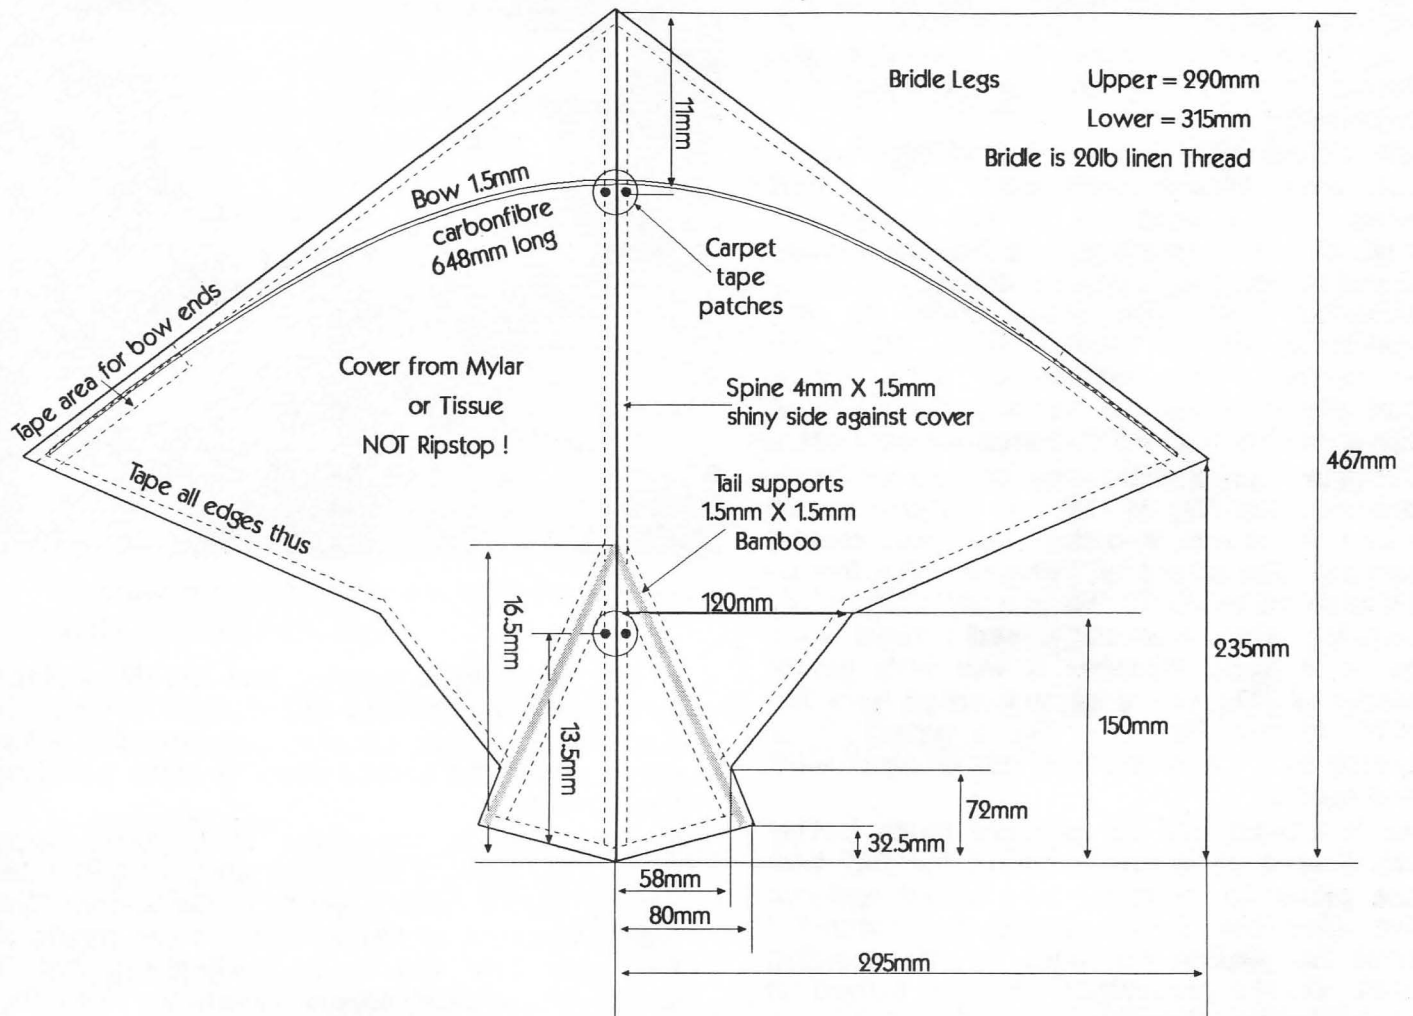

The Materials used in this kite are important to maintain the high performance level.

The tape needs to be waterproof 3M's, Vinyl or Polypropelene NOT! Sellotape.

The cover must be Mylar or Tissue. The Mylar is available from

The Highwaymen Shirley and Dick Turpin,
3 Beechwood Avenue, Burbage, Hinkley, Leicestershire.
LE10 2HD Tel 01455 230736

or

Jack Crouch
829 Belmont Road, Bolton. BL1 7BU Tel 01204
591021

The 1.5mm carbon spar is from Kitability

Building Sequence

1. Tape cover material to board
2. Draw out design
3. Tape edges
4. Attach spine, tail supports and carpet patches
5. Attach bow
6. Cut out kite outline
7. Reinforce bow ends at wingtips with tape
8. Pierce bridle holes and tie bridle
9. Fly
10. Enjoy